

How to make the Submarine Dive:

- I. **Pull out** the detachable Periscope-Radar Assembly on top of the submarine. Dip the submarine in the water, and then **shake out the excess water.** It is okay if there is still a bit of water left.
- 2. **Place baking powder** into the Bubble Chamber, making the chamber **2/3 full** with baking powder.

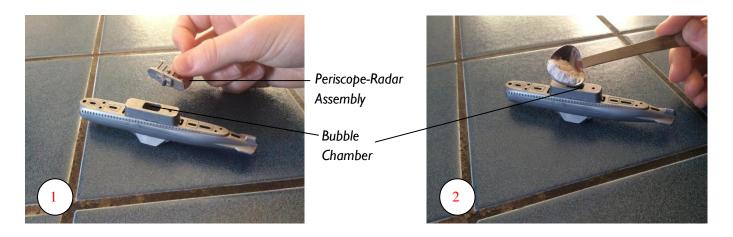


- 3. Wipe off the excess baking powder and then quickly insert the Periscope-Radar Assembly, pressing it in firmly.
- 4. Grasp the submarine by the Periscope-Radar Assembly and shake the submarine, in the water, vigorously for about 10 seconds.

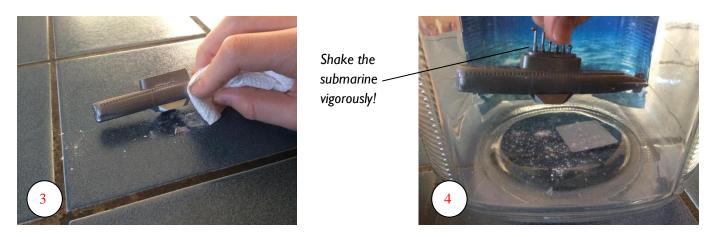

5. Let go of the submarine and it will submerge. Within 30 seconds, the submarine will surface automatically.

Want to make the submarine submerge again? Repeat steps 4 and 5, and the submarine will submerge and surface.

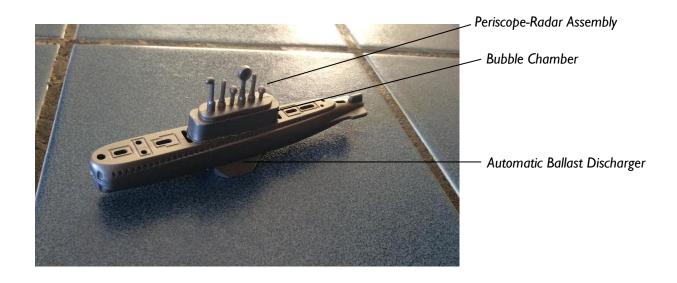

DID YOU KNOW: Some submarines can remain submerged (underwater) for months at a time!